



OM2501HF

(OM3501HF)

SHORTWAVE POWER AMPLIFIER



WWW.OM-POWER.COM

OM Power, s.r.o. 93030 Báč 126, SLOVAKIA

Contact : +421 905 321 410

e-mail : <u>om-power@om-power.com</u>

TABLE OF CONTENTS

1.	GENER	AL INFORMATION		4
	1.1.	Introduction		4
	1.2.	Specification		4
	1.2.1	. Parameters		4
	1.2.2	Protection Circuits		5
	1.2.3	3. Features		5
2.	SAFET	(INSTRUCTIONS		6
3.	GENER	AL DESCRIPTION		7
	3.1.	HF Compartment		7
	3.2.	Power Supply		8
	3.3.	Safety Devices		9
4.	INSTAL 4.1. 4.2. 4.3.	LATION Grounding Coaxial Cable Control Cable	Power	9 10 10 11
	4.4.	Cooling		11
5.	OPERA	TION	V	12
	5.1.	OM2501HF Front Panel		12
	5.2.	OM2501HF Control		13
	5.3.	Preparing for operation		14
	5.4.	Operation mode		20
6.	MAINT	ENANCE		22
	6.1.	Indication of Fault Conditions		22
	6.2.	Fuse Replacement		24
	6.3.	Tube Replacement		24

	6.4.	Cleaning		24
7.	APPEN	DIX		24
	7.1.	Primary AC selection		24
	7.2.	OM2501HF firmware upgrade		26
	7.3.	Control panel connectors pin-ou	t	29
	7.4.	Block Diagram of the OM2501HI	Power Amplifier	30
	7.5.	Troubleshooting		31
	7.6.	Factory reset		33



GENERAL INFORMATION

1.1. Introduction

he OM Power model OM2501HF and OM3501HF is designed for all shortwave amateur bands from 1.8 to 29.7 MHz (including WARC bands) and all modes. It is equipped with a ceramic tetrodes FU-728F or GU84B (OM3501HF with GU78B).

1.2. Specification

1.2.1. Parameters

Frequency Coverage	Amateur Bands 1.8 – 29.7 MHz including WARC			
Power Output	2500 W in SSB/CW on HF bands OM2501HF			
	3500 W in SSB/CW on HF bands OM3501HF			
	2000 W (3000 W) in RTTY and DIGI modes			
Input Power	Usually 40 to 60W for full Output Power			
Input Impedance	50 Ohm, VSWR < 1.5 : 1			
Power Gain	17 dB			
Output Impedance	50 Ohm unbalanced			
Maximum Output SWR 3 : 1				
SWR protection	Automatic switching to STBY, when reflected power			
	is 350W or higher			
Intermodulation distortion	-32dB below nominal output			
Suppression of harmonics	< -50 dBc			
Tubes	1 x FU-728F or GU84B Ceramic tetrode or GU78B			
Cooler	Centrifugal blower + Axial blower			
Power supply	switchable 2 x 220 ,230V, 240 V – 50 Hz single or two phases			
Transformers	2 pc's of toroidal transformers 2 kVA (3kVA OM3501HF)			
Dimensions	485 x 200 x 455mm (width x height x depth)			
Weight	46 kg			

1.2.2. Protection Circuits

There are several protection circuits used in the amplifier. They are activated when one or more parameters exceed defined values or some unwanted condition occurs.

- VSWR too high
- Anode current too high
- Anode voltage error
- Screen current too high
- Screen voltage error
- Grid current too high
- Grid voltage error
- Heating voltage error
- Mistuning of PA
- Temperature too high
- Soft start for fuse protection
- "switch-on blocking "at opened amplifier

1.2.3. Features

The manufacturer implemented some of the company's newest development results with most wanted operating and safety features into this new model:

- High level of protection
- Memory for faults and warnings, easy maintenance
- Automatic set-up anode current (BIAS) no need to adjust manually after changing the tube
- Three programmable working modes of the centrifugal blower (turbine) + axial blower
- Full QSK
- Many operational parameters to display
- Easy transport due to detachable HV transformer

2. SAFETY INSTRUCTIONS



DANGEROUS HIGH VOLTAGE INSIDE!

The power amplifier is using high voltage up to 2800 (3300) V DC, which is very dangerous for human life! Read next safety instructions carefully first, before you will start to install and operate power amplifier! NEVER VIOLATE THE FOLLOWING SAFETY RULES!

NEVER ALLOW CHILDREN to play around PA or to touch power amplifier or connected cables in working condition, or to push anything into the case holes!

Never turn the amplifier on without the upper lid in place. DO NOT ATTEMPT TO SHORT OR BYPASS safety switch under upper lid!

The OM2501HF amplifier should not be used in a WET or HUMID environment or be exposed to RAINFALL!

Do not turn the amplifier ON without having connected the ANTENNA or properly rated DUMMY LOAD! A hazardous HF voltage may build up on the antenna connector after turning the amplifier on with no antenna or dummy load connected!

Before removing the upper lid of the amplifier make sure that power supply has been disconnected AT LEAST 10 minutes allowing for the electrolytic capacitors to discharge fully. Disconnect power cord from the outlet!

Any work inside the PA (internal fuses replacement, tube replacement, etc.) should be carried out only by a professionally qualified person!



CAUTION

The amplifier must be installed in such a way that free flow of hot air from the tube is allowed. The amplifier must not be installed in a constrained surrounding (i.e. tight shelves etc.). During extended operation the tube ventilation grid can reach high temperature. Do not touch it!

The amplifier must be properly grounded during operation.

During operation the amplifier must be installed in such a way that the rear side remains accessible.

The amplifier is an A category product. In a household it can influence other electric appliances. In such cases the user is to take proper actions to mitigate this disturbance.

Read this manual carefully. Fallow all of instructions during installation and operation to avoid damage to the amplifier not covered by manufacturer's warranty! Do not attempt to perform any change of hardware or software!

3. GENERAL DESCRIPTION

3.1. HF Compartment

his amplifier is using ceramic tetrode FU-728F or GU84B (GU78B) in a grounded-cathode circuit (input into control grid). The OM2501HF (OM3501HF) amplifier achieves excellent linearity by the voltage stabilization of the control grid bias and the screen voltage. The power input is fed to the control grid, using a broadband input circuit with an input impedance of 50 Ohms. This adaptable input circuit ensures a good input SWR (better than 1.5 : 1) on all amateur bands.

The output of the amplifier is a Pi-L circuit. The variable capacitors for TUNE and LOAD are separate. This enables the amplifier to be tuned exactly and makes it possible to easily return to the previously set positions after band changes.

Tetrode FU728F (GU84b) B<u>lower</u> Switch-ON Board Output Pi-L Circuit Tuning Capacitor Front subpanel Power Supply Board

Top view on the opened OM2501HF (OM3501HF)

3.2. Power Supply

This Power amplifier uses two 2 (3) KVA toroidal transformer. A soft start is provided using relays and resistors (placed on the switch-ON board). The high voltage is made by combining 8 x 250 (300) V (total 2800 V DC (3380V DC) @ 2.0A (2.5 A). Each has its own rectifier and filter. In the high voltage circuit,

safety resistors and fuse are employed to protect the amplifier against overload (placed on the power supply board and around PI-L circuit).

The separate screen grid supply is regulated and stabilized with MOSFET circuits and delivers abt. 350V DC at 120mA. Control grid voltage is also stabilized (-120V DC). Change of stabilized first grid voltage is controlled by the software (EBS for example).



The transformer primary is Tap adjustable for 220, 230 or 240V AC.

The factory setting is 230 V AC.

If the AC voltage in your network is 220 or 240 Volts, you need to set the correct transformer tap before first starting the PA. See part 7.1. for more information. Other primary voltage is possible on request (for example 200V 50/60 Hz for Japan).

3.3. Safety Devices

Control and monitoring circuits ensure control and safety during malfunctions of the PA. These are placed on the Control board, which is located on the chassis subpanel.



One of the important safety elements is a mechanical switch for AC blocking an opened amplifier.

4. INSTALLATION



Read this chapter carefully prior to starting installation. Before unpacking inspect shipping carton for any damage. Keep all of packing parts for possible future shipment. Check unpacked
power amplifier. If you find any damage, contact your dealer immediately to keep full /.

warranty.

4.1. Grounding

The amplifier has to be grounded properly! Connect the screw on the rear panel of the amplifier to your local grounding system with a copper cable; use a cross-section of 4 mm² at least.

Connect your transceiver to the same grounding system of your shack carefully! Use minimum length cables and make certain that the connections are both physically and electrically sound. With poor grounding, you may risk damaging your equipment, have problems with TVI/BCI or possible distortion of your transmitted signal.

4.2. Coaxial Cable

The output of the transceiver is to be connected to the input of the amplifier via RG58 or similar 50 Ohm cable. For the connection between the power amplifier and the antenna, RG213 or similar coaxial cable suited for high power is recommended. SO-239 sockets with Teflon insulation are used for the HF INPUT and OUTPUT connectors.



4.3. Control Cable

Control cable maintains TX / RX switching of the PA (TX GND). The cable is shielded. On the side of the power amplifier a CINCH-socket is used. On the side of your transceiver you have to use a socket suitable for this transceiver. During transmitting the middle pin is connected to the ground. The relays of the OM2501HF (OM3501HF) have to be switched earlier than HF is applied (cold switching). Modern transceivers they have a time delay between PTT switching and power output, recommended is to set the time delay to 15ms.

If you are using an older transceiver or transmitters without time delay, we recommend to connect the PA in such a way that the transmit/receive switch (foot switch for example) is connected with the KEY IN socket of the amplifier. The KEY OUT socket is connected to the PTT socket at the transceiver. If there is possible to adjust TX delay in your TCVR, set the delay to 15ms, please.

The amplifier is equipped with safety devices, which ensure that the output relay is not switched under power mistakenly (hot switching).

KEY IN KEY OUT RCA Phono - Input signal PTT switching voltage / current - 5V /2mA) RCA Phono - Output signal PTT (maximum switching of 30V / 50mA)



Be sure that your power system is correctly wired and properly rated! To use an adequately sized and connected grounding system is also very important!

4.4. Cooling



The amplifier must be installed in such a way that free flow of hot air from the tube is allowed. Do not obstruct air intake and exhaust areas of the PA.

The centrifugal blower provides the necessary cooling of the amplifier, even during long contests. The blower is activated by switching the PA on and it is turned off when cooling is finished (approx. 1-5 min after switching off the PA depending on the temperature of the tube). Blower working mode is programmable (3 modes). See page 17 for more details.

5. **OPERATION**

Before switching PA on, make sure that amplifier is grounded, antenna or dummy load is connected, and line cord is plugged into the outlet. Be sure you have selected the proper AC input TAP (Sect 7.1)



Do not turn PA on for at least 2 hours after unpacking and located in its operating location. Especially when amplifier is moved from a cold place to a warm one as condensation may develop. This condition could result in damage to the high voltage circuits.



We do not recommend changing antennas during a transmission. (Hot switching)



When you decide to have a short operating break, we recommend placing the amplifier to the standby mode rather than switch it off.

5.1. OM2501HF Front Panel

Front panel of the OM2501HF containing the touch TFT display , two control switches and three knobs for output circuit adjustment.



ON - **Main Switch.** After turning ON, a small 12V power supply for logic, protection circuits and the display will be activated. High voltage and RF circuits are still OFF.

OPR/STBY - Short press for switching between STBY and OPERATION mode.

ON/OFF - Long press (hold for a 1 sec.) for switching the PA ON (first start to tube heating), 2 seconds for PA OFF. Always first use the ON/OFF button as this allows for a predetermined (software controlled) time to cool down the tube and inside the PA compartment.

5.2. OM2501HF, OM3501HF control

Turn ON the green Main Power switch and the **home screen** lights-up. Initial control touch buttons are visible on the bottom line.



5.3 Preparing for operation

INFO

SETTING

In STBY the amplifier is in bypass-mode and your transceiver is directly connected to the antenna. Maximum allowed power in bypass mode is 200 Watts! The bypass RF power is displayed if PA is in standby mode.

To turn PA ON press ON/OFF button on the front panel (black one) and **hold it abt. 1 second**. PA will start tube heating. It will take 180 seconds. Turning PA ON is possible **ONLY** from the home screen! If you have other display active, press EXIT to go back to the home screen.



Press **BACK** button for returning to Main display

	INFORM	MATIONS	
Amplifier s Software v Time ON:	erial number: ersion:	2005 2.22 0:15	
Tube serial Nominal m	number: ains voltage:	783 01 230 V	
WARNINGS	FAULTS	Umain	EXIT

Press INFO button

A new button is visible – **SET Umain**. Press it.

Unom:				23	0_				
1	2	3	4	5	6	7	8	9	0
2	!	@	#	\$	%	&		()
AB	с -	+					?		1
EX	IT		<u>1996</u>		S	PAC	E	E	٩T

Type in the actual setting of the primary voltage tap and press **ENT**.

Press EXIT twice to go back to the Menu display.



This is not the actual physical setting of the primary voltage tap. It is just information for the processor, which protects the permitted limits (up or down) for a given value of the primary voltage (protection circuit).



Pressing **SETTING** displays this screen.

Scrol by UP / DOWN to **DISPLAY SETTING** and press **SET**



SAVE

EXIT

Use next lines and set brightness and sound volume (use up/down and left/right). Confirm with **SAVE.**

	SETT	IN(SS	
DISPLAY SETTING EBS EBS LEVEL BLOWER TURN	0.1 0.1	DFF W TEMP.	DN	always
~ >	SET	EXI	т	

Next lines are for EBS (Electronic Bias Setting) ON/OFF and for EBS level selection.

We recommend **EBS ON**. See next comment for more details.

Electronic Bias Settings (EBS) is a significant feature of this power amplifier. It automatically allows lower plate current after pressing the PTT, regardless of whether operating CW or SSB mode, when no RF signal is present at the input. In the moment an RF signal is applied, the bias will automatically change to its working value.

EBS level means level of the Input power where EBS starts working. Default EBS value is 0.1 W. We recommend turning EBS ON. A significant feature of using EBS is PA operating temperature reduction.

NOTE: If you are not using compression in your TCVR, or you are not speaking loud enough, some syllables can be cut off. In such a case you should turn OFF the EBS.



In the next line you can define working mode of the blower. In the first mode speed depends on the PA temperature (**TEMP**), In **PTT** mode the speed increases to maximum, and the **ALLWAYS** mode means maximum speed all the time during PA operation (recommended for DIGI modes).

Press **SAVE** to write the mode to the memory.



Press **MEAS** button.

18

screen.

Or another value of EBS2 by MANUAL Set.

You can try to do this manually, too.

Scroll to **SET EBS1 MANUAL** and press **SET.** Use up/down buttons to set 20mA or as close as possible value and press **SAVE**.

Similar ways **EBS2** can be preprogrammed (300 mA FU-728F, 400mA GU84B and 500 mA GU78B by AUTO set).

We recommend setting it to **ON** (SWR protection circuit will stay active, max. allowed SWR is 3:1). If **OFF** is selected, higher SWR is allowed, but reflected power is measured. If it exceeds 350W, transmit will be blocked.

Press EXIT.

5.4.Operation mode

Before switching to operation mode, check all connections between PA and TCVR.

FORWARD POWER. KW	
0 0.05 0.2 0.5 1.0 1.5 2.0 3.0 Pref 0 3 10 30 60 100 200 300 Screen -40 -20 0 +20 +40 W	We are now back in the Main display . We are ready to go to the operation mode. Press the black STBY/OPER button on the front panel or button OPERATE on touch screen display
FORWARD POWER, kW 0.05 0.2 0.5 1.0 1.5 2.0 3.0 Pref 0 3 10 30 60 100 200 300 Screen -40 -20 0 +20 +40 Prive 0 1 3 6 12 25 40 60 75 100 Tune +5 +3 +1 0 -1 -3 -5 W LAST EVENTS OPERATE LAST EV. INFO SETTING MEAS SERVICE STBY	We are now in OPERATE mode. Note the light indicator on the touch screen has changed to OPERATE . Press MENU .
FORWARD POWER, KW 0.05 0.2 0.5 1.0 1.5 2.0 3.0 Pref 0 3 10 30 60 100 200 300 Screen -40 -20 0 +20 +40 w	Now try to press PTT (foot switch for example). We are now in TRANSMIT mode (without RF).
Drive 1 3 6 12 25 40 60 75 100 Tune +5 +3 +1 0 -1 -3 -5 W LAST EVENTS TRANSMIT OPERATE OPERATE INFO SETTING MEAS SERVICE STBY	Note the new TRANSMIT light indicator on the touch screen.

NOTE: The OM25001HF (OM3501HF) is tested at factory at a maximum output power of 2500W (3500W) into a 50 Ohm load. A unique **Tuning table**, with TUNE and LOAD values for every band, is supplied with each PA.

When the antenna impedance has greater variance from 50 Ohms, it may be the case that the PA cannot deliver the full power 2500W (3500W), or some of the protection circuits may be automatically activated. In such cases we recommend doing a manual tuning.

The best indication of proper PA tuning is the Screen Current. In the properly tuned PA this should be within 0 to + 20mA (0 to +30mA) (at full output power).

Tuning procedure:

• Set band switch with knob BAND at proper position and set knobs TUNE and LOAD at position according Tuning table

NOTE: Set input power to about 25 watts to begin.

- Press PTT and apply input power from TCVR, check the Ig2 (I Screen on the display). If it is ok (bellow +20mA), gradually increase the input power until the PA reaches about 70% of its maximum output power.
- Using the TUNE knob, adjust for maximum FORWARD POWER while monitoring the Screen current.
- When the Screen current exceeds +30mA, adjust the LOAD knob to decrease Screen current to about 0 mA. Readjust TUNE for maximum FORWARD POWER.
- Increase the PA input power until you reach the desired maximum output power. Keep watching the Screen current. If the Screen current exceeds +30mA decrease it by using the LOAD knob.
- Repeat using the TUNE knob to reach desired maximum FORWARD POWER and check Screen current.
- If the Screen current is lower than 0 mA (negative value), change it by turning the LOAD button until 0 mA is set and check again for maximum output power. Do not start with very low input power, set abt. 50% before beginning tune process.
- If you reached the desired maximum output power, and the PA Screen current is inside 0 / +20mA (30 mA), then tuning process is finished.

Notice 1: If the tuning process takes more than 1 minute, allow for a short break to prevent temperature overloading of the PA.

Notice 2: If you use the PA with the output power adjusted lower than the maximum settings, screen current can take negative values. There is no need to readjust the PA, it is still working in the linear mode.

At the following picture you can see display of properly tuned amplifier

FOF	WAR	D PO 02	WER,	kW 1.0	1.5	2.	0	3.0	2	25	54	0	W
Pref W Drive	0 3 10	30 60 6 12	100	200 30 10 60 75	0 5 100	Screen mA Tune	+5	-40 -	20 +1	0	+2(0 +4 -3	
	L	ASTE	VENT	TS (Passes)		TF	RAN	ISMI	7		OPE	ERAT	E
LAS	ST EV.	IN	FO	SETTI	NG	M	EAS		SER\	/IC	E	STI	3Y

Output power is 2500W, reflected power about 2W and screen current is about +10 mA.

If the amplifier demonstrates any malfunctions during tuning or it does not behave in accordance witch the TUNE procedure, interrupt the tuning procedure immediately and check the amplifier! Be sure there are not any mistakes in choosing antennas or bands! Insure that VSWR is not higher than 3:1 and input power is not to high!

6. MAINTENANCE

6.1. Indication of Fault Conditions

If a fault condition appears during the operation of the amplifier, the safety circuits of OM2501HF(OM3501HF) will react immediately. There are several types of warning or fault messages that may appear on the display when any of the protection circuits are activated. The OM2501HF (OM3501HF) power amplifier provides the following protection:

Power Out is too high Refl. power too high Power In is too high Low output power (tune) Plate current too high Screen current error Heating voltage error HARD FAULT Plate voltage error Grid voltage is low Screen voltage error SWR is too high Amplifier is too hot

Most of the safety circuits are preset for two levels of activation. The first level is a warning level. In such a case a warning message appears on the display, but the power amplifier will stay in **normal operation**. See the table above for warning and fault conditions. When a fault condition occurs during the tuning or operation of the amplifier, the safety circuits will **block transmitting**. The amplifier stays in **OPER** mode. After approx. 1 sec the control circuits will automatically switch the amplifier back to the transmitting mode. If the problem persists, the safety circuit will react again, and the appropriate fault message will appear on the PA status screen.

If the fault repeats 3 times during a 10 seconds interval, the safety circuits will turn the amplifier to STBY mode. Cancelling a fault condition takes a short press of the STBY/OPER button. The PA will stay in STBY mode.

NOTE: All the warning and fault messages are stored in the onboard memory. You can display particular warning messages and particular error messages. They are stored up to 20 at a time to the memory. You can view them on the menu display. If the error memory is full, every new message will delete the oldest one in the stack. It means that only the last 20 messages are visible on the display.

Never try to change or move any part inside the amplifier except the tube or fuses. Substitution of parts may void intrinsic safety!

Manufacturer's contacts:

OM POWER, s.r.o. 930 30 Báč 126 SLOVAKIA Email: <u>om-power@om-power.co</u>

6.2. Fuse Replacement

The user is allowed to change mains fuses (6.3 x 32mm), accessible from the rear panel, only. In the case of fuse (fuses) interruption inside the power amplifier, **exchange can be carried out only by professionally qualified persons!** Internal fuses are located mainly on the SWITCH-on board (next to the HV transformer).

One special fuse, filled with sand, is used in the model OM2501HF(OM3501HF). In the case of an accidental discharges or short within the tube this fuse (4 Amps fast, filled with sand) saves the HV supply circuits.

Fuse F4A

6.3. Tube Replacement

In the case of a damaged vacuum tube, contact the manufacturer or your dealer for ordering a new one. We will provide instructuions for replacing the tube. **Replacement should be done by a professionally qualified person!** After tube replacement the **automatic BIAS adjustment** procedure must be done.

6.4. Cleaning

To prevent damage to the amplifier surface and plastic components, do not use aggressive chemicals for cleaning. Do not open the amplifier for cleaning. Outer surface cleaning may be safely accomplished by using a piece of soft cotton cloth moistured with clean water or window cleaner.

7. APPENDIX

7.1. Primary AC voltage selection

Primary section of the HV transformer is switchable for three values of AC voltage (220, 230, 240V) Factory settings is 230VAC. Before first starting the PA we recommend checking that the correct value is selected according to the AC voltage in your network.

<image>

Side view on the opened OM2501HF (OM3501HF)

HV Transformers

Remove the upper lid first. On the right side of the PA, there are two PCBs mounted. On the right upper side is Switch ON board where AC selector is located.

There are AC selector for each transformer. The blue wire – one side of primary winding is conected to N pole. Wire marked with proper voltage connect to L pole.

AC voltage is marked at every black terminals.

AC selector range can be changed according to the specific conditions in individual countries. Default settings is 220, 230, 240V / 50Hz for EU market and 230, 240, 250v / 60Hz for USA market. If you need different settings in the range of 200 – 260V, this should be specified in the order!

Manufacturer reserves the right to make future changes in the way of connecting the transformer to the board. Allways mark the position of the terminals before disconnecting the transformer.

7.2. OM2501HF(OM3501HF) firmware upgrade

Download the firmware upgrade software and latest firmware file for the OM2501HF(OM3501HF) from the official OM Power website <u>http://www.om-power.com/downloads</u>. Store it to OM2501HF(OM3501HF) folder created on your PC.

NOTE: Use a serial null modem cable and connect to the PC port on the OM2501HF(OM3501HF) rear panel with a COM port on the PC.

🕞 PIC 32MX460 loader, ver 2.4	
File Settings Help	1
Firmware EEPROM	7
Firmware version in data file N/A Waiting Rejects 0 Estimated remaining time Operation Estimated remaining time Definition Estimated remaining time Transfer STOP T rx T rx 14:53:40,140 Start	Open folder OM2501HF(OM3501HF) on your PC, find the MX460L.exe file and run it.
14:53:40,156 Mapping serials 14:53:40,468 Opening COM 1 - OK	
COM1 115200Bd 8N1 Interface	Select SETTINGS and choose the COM port you want to use. Baud rate should be 115200. Close the window.
• Code and port • 17:45:01,253 Start • 17:45:01,253 Mapping serials • 17:45:01,326 Opening COM 4 - OK • COM4 • 115200Bc 8N1 Interface ot connected	V
File Settings Heln	
Firmware EEPROM	Select the Firmware tab and click on the LOAD BIN button.
Waiting Rejects 0	Choose OM2501HF(OM3501HF) Vxxx.bin file in the OM2501HF(OM3501HF) folder.
Operation tx rx Image: Load bin Image: Send to line Transfer STOP Image: Load bin	
14:55:53,406 Testing input data format	
14:55:53,437 Firmware version found: 02.13	
14:55:53,437 Activate mode Update firmware on PA! 14:55:53,437 Data ready, click button "Send to line"	
COM1 115200Bd 8N1 Interface	2

NOTE: Do not take any action until this screen disappears!

At the end you will return to the main screen of OM2501HF(OM3501HF). Turn the PA OFF, disconnect the PC serial cable and you are ready to use the OM2501HF(OM3501HF) with the new firmware.

7.3. Control panel (rear side) connectors pin-out

PC connector DB 9 female

RS232 connection to the computer. For UPRADE firmware communication connect pin 2 TX-D, pin 3 RX-D and pin 5 GROUND

KEY IN – RCA connector

Input signal PTT switching voltage / current 5V /2mA)

KEY OUT – RCA connector

PLUG Ground/return Signal

Output signal PTT (maximum switching of 30V / 50mA)

7.4. Block Diagram of the OM2501HF Power Amplifier

7.5. Troubleshooting

The OM25001HF(OM3501HF) power amplifier contains several protection circuits, which constantly monitor operation of the Amplifier. When the firmware defined parameters exceed defined operating levels, a WARNING appears in the LAST EVENTS window of the PA front panel. If some parameters exceed a defined critical level, a FAULT is activated and the PA will automatically switch to STBY mode. The LAST EVENTS window will then display the fault information.

All of these events are written to the FAULT and WARNING memories. The Last event is visible after the LAST EVENTS button is pressed including information about possible causes.

Warning / Fault	Action	Description			
Power Out is too high	Reduce input power	Output power exceeds maximum level, reduce the input power.			
Refl. power too high	Check your antenna Reduce output power	Reflected power exceeds maximum allowed level. Check if proper antenna is connected. In the case of higher SWR reduce the input power and thus the output and reflected power will be lower.			
SWR is too high	Check your antenna Check antenna switch	Antenna SWR is too high (SWR 3 for WARNING and SWR 5 for FAULT). Check if proper antenna is connected. Check antenna switch configuration. If you want to use an antenna with higher SWR, this SWR protection can be switched off (page 19). But reflected power will stay checked (max.350W).			
Power In is too high	Reduce input power Check amplifier tuning	PA input is too high - decrease it! If maximum output power is not achievable, check plate voltage and PA tuning.			
Low output power (tune)	Tune mistake. Retune your amplifier	The PA has lower gain and may not be properly tuned. Check the plate voltage and Screen current. If they are ok, manually adjust for optimal tuning of the PA			
Plate current too high	Reduce input power Check amplifier tuning Check EBS setting	 Plate current too high. Check the following: Too high input power – reduce it Improper tuning of the PA – bad antenna impedance matching. Tune the PA properly. Improper BIAS setting. Check EBS1 and EBS2. 			
Grid current is high	Reduce input power Check amplifier tuning	Grid current too high is due to overdriving the PA. Reduce the input power. If maximum output power is no reachable due to high plate current, check the PA tuning.			
Screen current error	Reduce input power Check amplifier tuning Check plate voltage fuse	 High screen current is usually due to the following reasons: Overdriving the PA – reduce the input power Improper PA tuning. At maximum output power the screen current must be inside the range of 0 mA to +30 mA Plate voltage is missing. Press PTT without driving If screen current is higher than +20mA, check plate voltage fuse (page 24). 			
Plate voltage error	Check plate power supply	High voltage supply fault. Check the fuses on HV board.			

There are several warning or fault messages that may appear on the display:

Grid voltage is low	Check grid power supply	Low voltage on the grid. Check fuse F9 on HV supply board.
Screen voltage error	Check screen power supply	Check fuse F10 and F11 on HV supply board and fuse F1 on the Screen board.
Amplifier is too hot	Check cooling system Set up additional blower	Check the airflow (ventilation grid on the rear panel). Cooling exhaust must be free from any obstructions. During extended use set the blower speed to ALWAYS ON (page 17).
HARD FAULT	Check HV circuits and Tube	Protection circuit saved HV against overload. If high current from the HV supply caused the HARD FAULT then is activated the protection and the PA is automatically switched OFF. Check HV circuits, blocking capacitors and the tube itself.
Heating voltage error	Set up proper transformer voltage selector	This error is usually due to improper setting of the primary voltage on the transformer (page 25). In normal condition Uh readings should be 9V +/- 0,3V for FU-728F (27 +/- 1,4 V for GU tubes)
Cooling error	Check blower rotation	Main blower problem. Check its functionality.
Mains error	Check mains voltage and set up nominal mains voltage Set up proper transformer voltage selector	This error may be caused by the improper setting of the nominal value of Um. Check your AC mains voltage and set it as nominal Um (page 15). Check the primary voltage setting on the transformer. This fault may also be caused by "soft" mains, when during transmitting the AC voltage drops to a very low level.
		Power

7.6. Factory reset:

In the case of very abnormal behaviour of the OM2501HF (OM3501HF) it is possible to do a factory reset. This will reset all the amplifier parameters back to the factory default values.

Press and hold the ON/OFF button and press the green Main power switch for several seconds until the following display appears.

Important notice: Perform a Factory Reset only if absolutely necessary to clear abnormal behaviour, because personalized settings and any USER settings must be re-input.